


## Ball Check Valve Locations

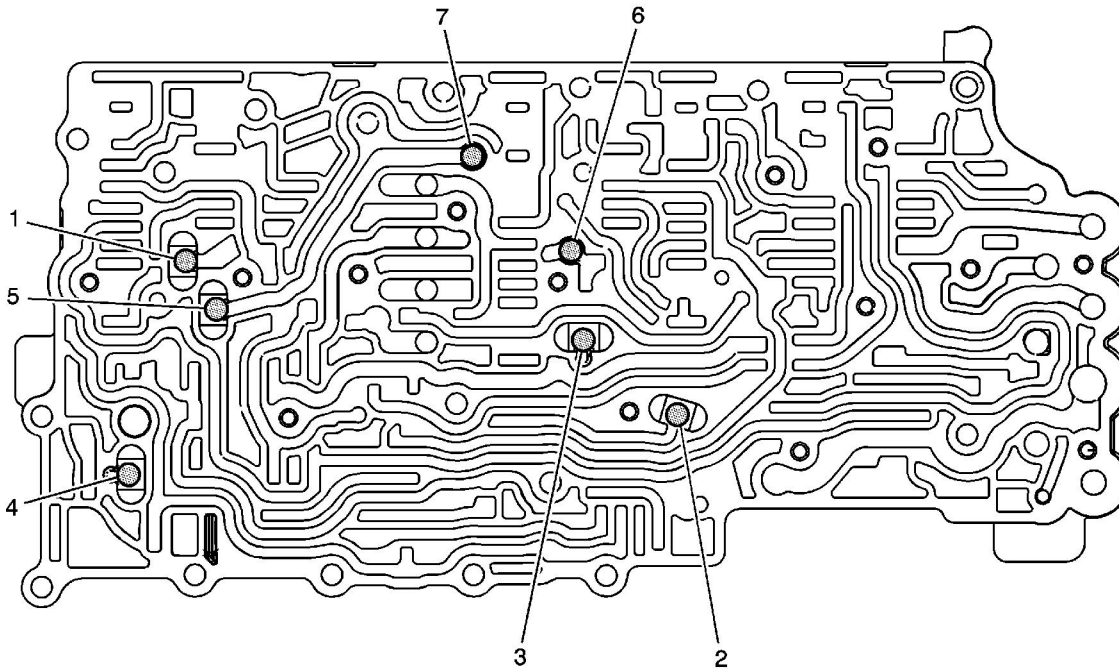

I.D.	Input Oil	Input Oil	Output Oil
1	Drive 1-6	DRV B	CB26/C1234 FD
2	Sol 1	Reverse (Park)	CSV2 Enable
3	Sol 2	C456	CSV3 Enable
4	PS4	C456	CSV2 Latch
5	Drive 1-6	C35R Rev FD	C35R Supply
6	CB26/C1234 FD	--	C1234 FD
7	C35R Supply	--	C35R FD