


Bushing, Bearing, and Washer Locations

Bushing, Bearing and Washer Locations

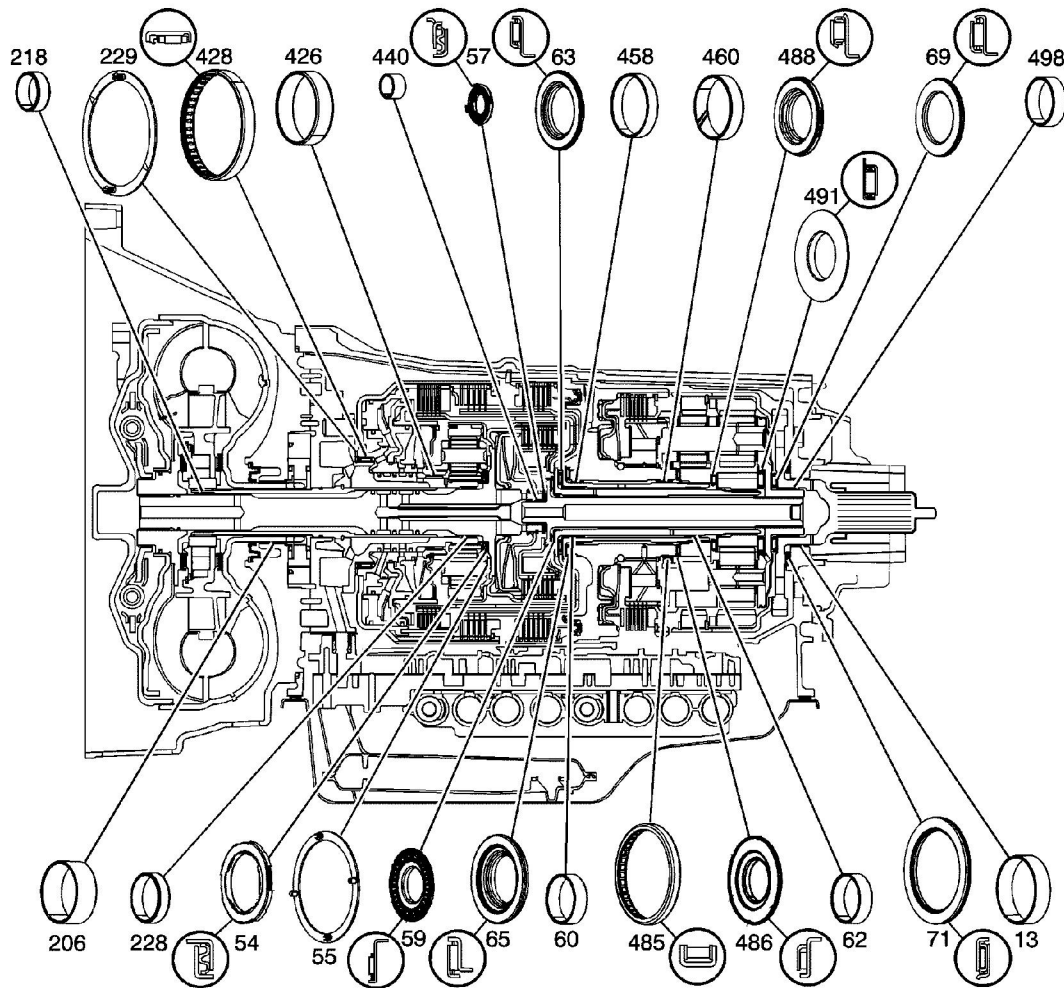

- (13) Output Shaft Bushing
- (54) Input Sun Gear Thrust Bearing
- (55) Input Sun Gear Thrust Washer
- (57) Turbine Shaft Thrust Bearing Assembly
- (59) 4-5-6 Clutch Hub Thrust Bearing Assembly
- (60) Output Carrier Inner Sun Gear Shaft (Front) Bushing
- (62) Output Carrier Inner Sun Gear Shaft Bushing
- (63) 1-2-3-4 Clutch Hub Thrust Bearing Assembly
- (65) 2-6 and 3-5 Reverse Clutch Hub Thrust Bearing Assembly
- (69) Output Carrier Thrust Bearing Assembly

© 2013 General Motors Corporation. All rights reserved.

- (71) Output Shaft Thrust Bearing Assembly
- (206) Torque Converter Bushing
- (218) Turbine Shaft Front Bushing
- (228) Turbine Shaft Rear Bushing
- (229) 1-2-3-4 and 3-5 Reverse Clutch Housing Thrust Washer
- (426) 1-2-3-4 and 3-5 Reverse Clutch Housing Rear Bushing
- (428) 1-2-3-4 and 3-5 Reverse Clutch Bearing Assembly
- (440) Output Carrier Shaft Housing Bushing
- (458) Output Carrier Outer Sun Gear Shaft (Front) Bushing
- (460) Output Carrier Outer Sun Gear Shaft Rear Bushing
- (485) Centre Support Roller Bearing Assembly
- (486) Output Carrier Front Sun Gear Thrust Bearing Assembly
- (488) Output Carrier Front Sun Gear Rear Thrust Bearing Assembly
- (491) Output Carrier Rear Sun Gear Thrust Bearing - Captured
- (498) Output Carrier Bushing