


Component Location

Component Locations

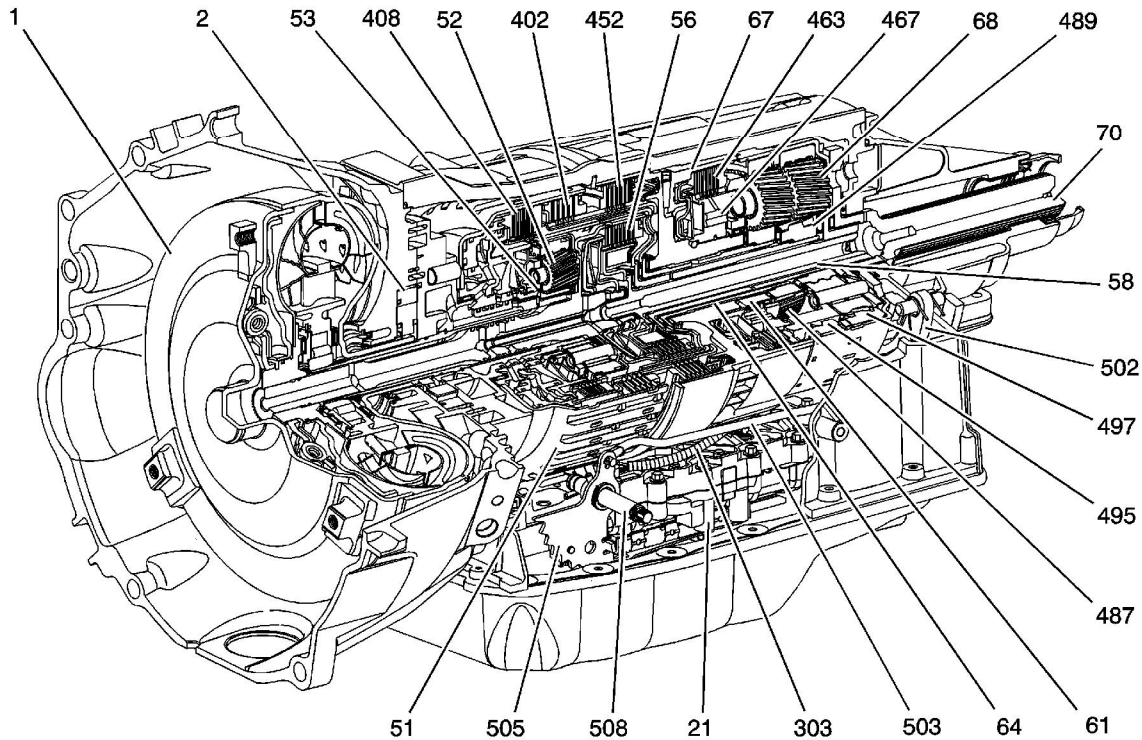

- (1) Torque Converter Assembly
- (2) Torque Converter (with Fluid Pump) Housing Assembly
- (21) Control (with Body and Valve) Valve Assembly
- (51) 1-2-3-4 and 3-5 Reverse Clutch Assembly
- (52) Input Carrier Assembly
- (53) Input Sun Gear
- (56) 4-5-6 (w/Turbine Shaft) Clutch Assembly
- (58) 4-5-6 Clutch (w/Output Carrier Shaft and Dampener) Hub Assembly
- (61) 1-2-3-4 Clutch (w/Output Carrier Inner Sun Gear Shaft) Hub Assembly
- (64) 2-6 and 3-5 Reverse Clutch (w/Output Carrier Outer Sun Gear Shaft) Hub Assembly
- (67) Centre (w/2-6 Low and Reverse Clutch) Support Assembly
- (68) Output Carrier Assembly
- (70) Output Shaft Assembly
- (303) A/Trans Input and Output Speed Sensor Assembly
- (402) 3-5 Reverse Clutch Plate Assembly
- (408) 1-2-3-4 Clutch Plate Assembly
- (452) 2-6 Clutch Plate Assembly

© 2013 General Motors Corporation. All rights reserved.

- (463) Low and Reverse Clutch Plate Assembly
- (467) Low Clutch Sprag Assembly
- (487) Output Carrier Front Sun Gear
- (489) Output Carrier Rear Sun Gear
- (495) Output Carrier Internal Front Gear
- (497) Output Carrier Internal Rear Gear
- (502) Park Pawl
- (503) Park Pawl Actuator Assembly
- (505) Manual Shaft Detent Lever Assembly
- (508) Manual Shift Shaft