



## Transmission Control Replacement

### Removal Procedure

1. Raise and support the vehicle. Refer to [Lifting and Jacking the Vehicle](#).

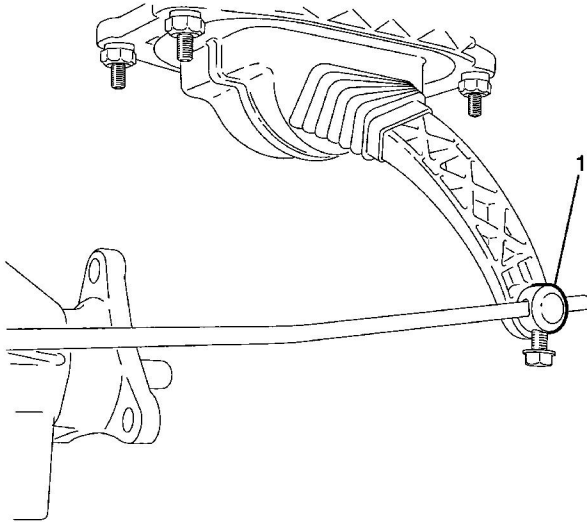


2. Remove the shift control linkage adjustment nut.
3. Disconnect the shift control linkage rod from the shift control assembly (1).
4. Lower the vehicle.
5. Remove the center console assembly. Refer to [Front Floor Console Replacement](#).

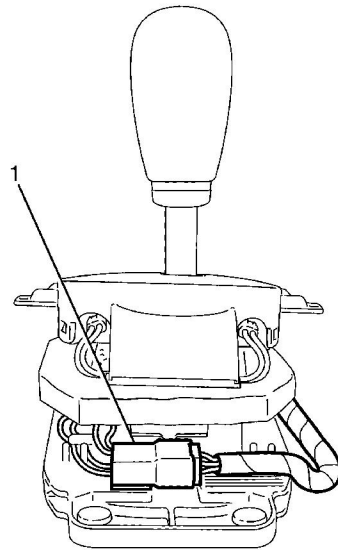


6. Remove the electrical connector (1) from the shift control assembly.

© 2013 General Motors Corporation. All rights reserved.

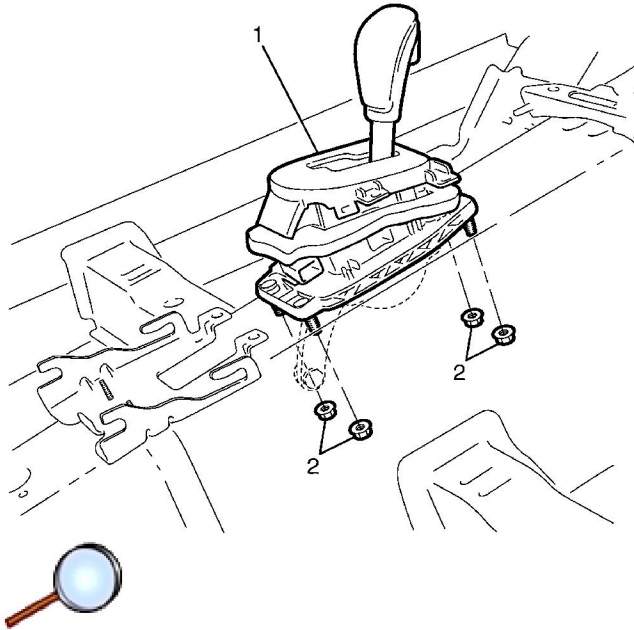

7. Remove the shift control assembly to the tunnel reinforcement retaining nuts (2).
8. Remove the shift control assembly (1) from the tunnel reinforcement.


## Installation Procedure

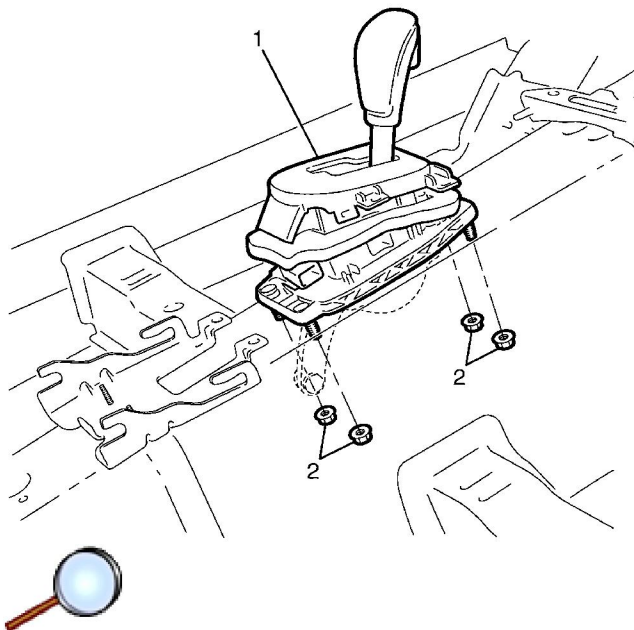


1. Install the shift control assembly (1) to the tunnel reinforcement.

**Caution:** Refer to [Fastener Caution](#) in the Preface section.

2. Install the shift control assembly to the tunnel reinforcement retaining nuts (2) and tighten to **12 N·m (106 lb in)**.

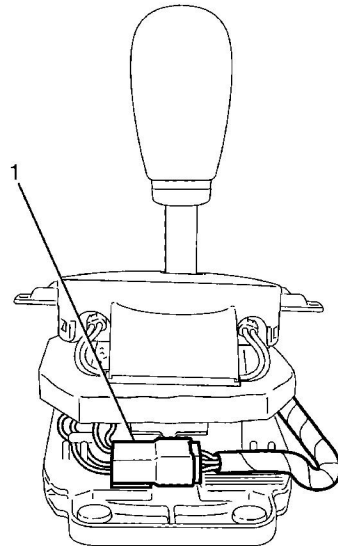

3. Install the electrical connector (1) to the shift control assembly.
4. Install the centre console assembly. Refer to [Front Floor Console Replacement](#).
5. Install the shift control trim plate by inserting the front retaining tabs to the console. Press down on the rear of the trim plate to engage the rear retaining tabs.
6. Raise and support the vehicle. Refer to [Lifting and Jacking the Vehicle](#).

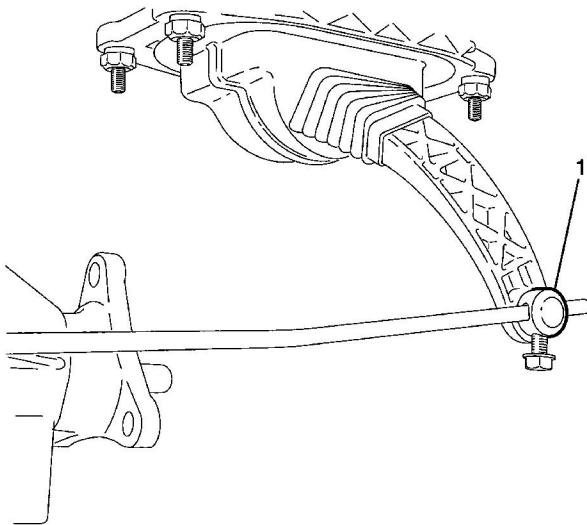

7. Connect the shift control linkage rod to the shift control assembly (1).
8. Install the shift control linkage adjustment nut finger tight.
9. Adjust the shift control linkage. Refer to [Shift Control Linkage Adjustment](#).
10. Lower the vehicle.