


Automatic Transmission Fluid Pressure Test Hole Plug Replacement

Removal Procedure


1. Raise and support the vehicle. Refer to [Lifting and Jacking the Vehicle](#).

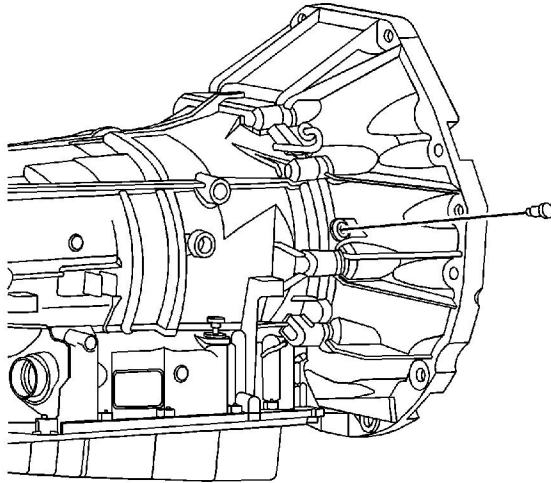

2. Clean the surrounding area of the oil pressure test plug.
3. Remove the oil pressure test plug.

Installation Procedure

Caution: Refer to [Fastener Caution](#) in the Preface section.

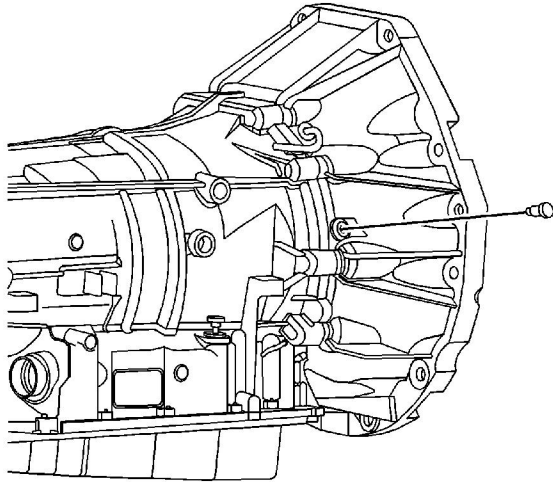

1. Install the oil pressure test plug and tighten to **11 N·m (97 lb in)**.
2. Check the transmission fluid level (fill if necessary). Refer to [Transmission Fluid Check](#).
3. Lower the vehicle.