


Transmission Converter Cover Replacement

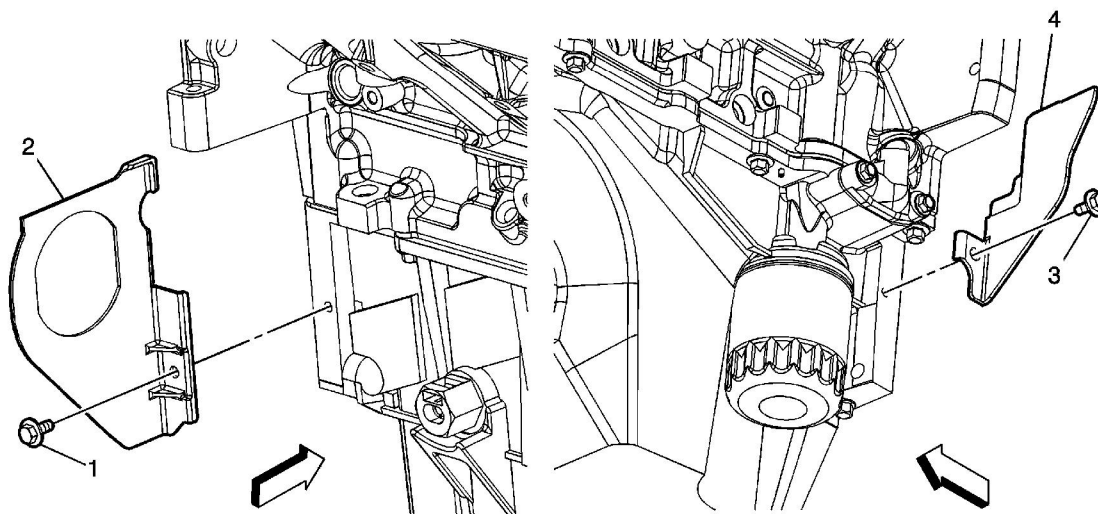

Callout	Component Name
Preliminary Procedures	
Raise the vehicle. Refer to Lifting and Jacking the Vehicle .	
1	Torque Converter Cover Bolt Caution: Refer to Fastener Caution in the Preface section. Tighten 10 N·m (89 lb in)
2	Torque Converter Cover Tip Remove the starter. Refer to Starter Motor Replacement .
3	Torque Converter Cover Bolt Tighten 10 N·m (89 lb in)
4	Torque Converter Cover