


Torque Converter Removal and Holding Fixture Installation

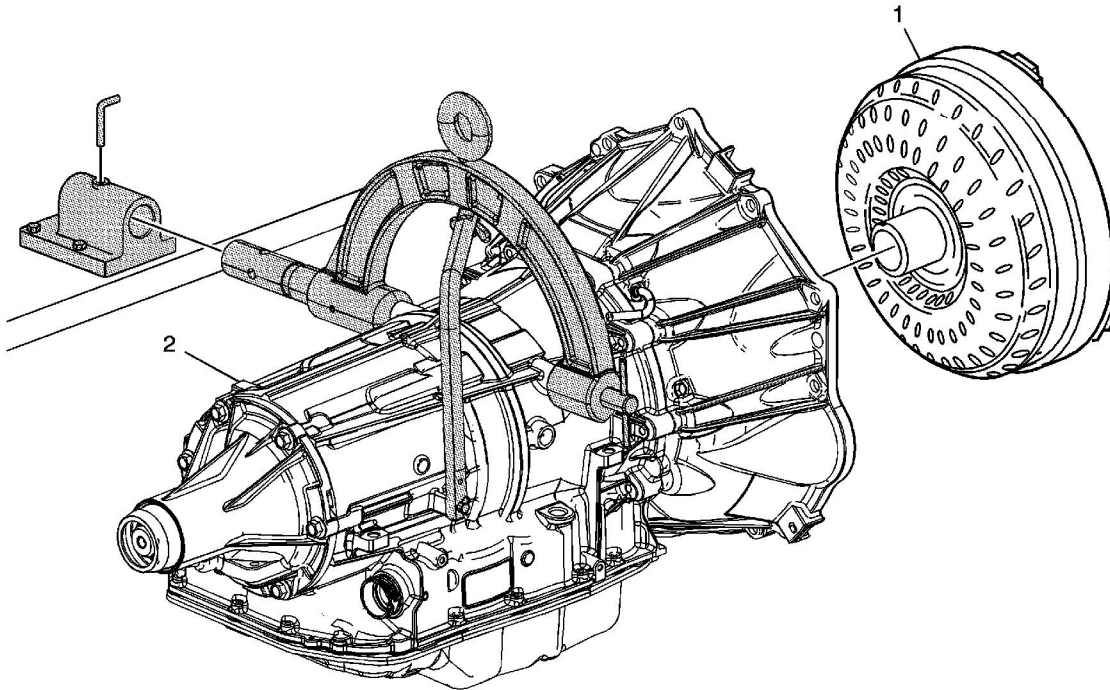

Callout	Component Name
1	Torque Converter Assembly
2	Transmission Case Assembly Special Tools <ul style="list-style-type: none"> • J 8763-B . • DT 47605 . • J 3289-20 .
3	Locking Pin Tip <ol style="list-style-type: none"> 1. Rotate the transmission so that the converter housing is up and secure with locking pin. 2. Allow any remaining transmission fluid to drain from the case extension.