
2009 Pontiac G8 | G8 Service Manual | Transmission | Automatic Transmission - 6L50/6L80/6L90 |

Repair Instructions - Off Vehicle | Document ID: 2074983

Output Carrier to Output Shaft Assemble



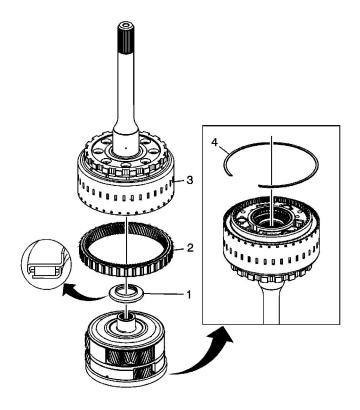

Callout	Component Name
1	Output Carrier Thrust Bearing Assembly
2	Output Carrier Internal Front Gear Caution: Install the gear flat side down. Failure to install the gear flat side down may result in transmission damage.
3	Output Shaft Assembly
4	Output Carrier Internal Gear Retaining Ring Tip Grasp the output shaft and carrier with both hands to turn over.

© 2013 General Motors Corporation. All rights reserved.