


## Torque Converter Housing Cleaning and Inspection

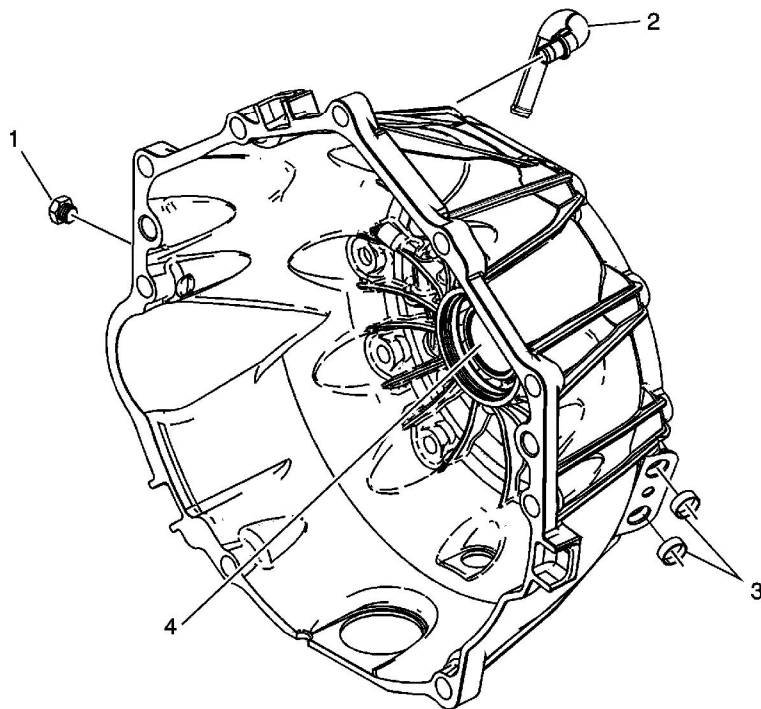

Callout	Component Name
<b>Preliminary Procedures</b>	
1. Thoroughly clean the torque converter housing assembly, including threads, with clean solvent. 2. Clean sealing surfaces. 3. Inspect all threaded holes. If necessary, repair any thread damage.	
1	Line Pressure Test Hole Plug
2	A/Trans Vent Pipe
3	Trans Fluid Cooler Pipe Fitting Seal <b>Important:</b> Seals must be replaced. Refer to <a href="#">Transmission Fluid Cooler Pipe Seal Replacement</a> .
4	Torque Converter Bushing