


3-5 Reverse Clutch Backing Plate Retaining Ring Measurement

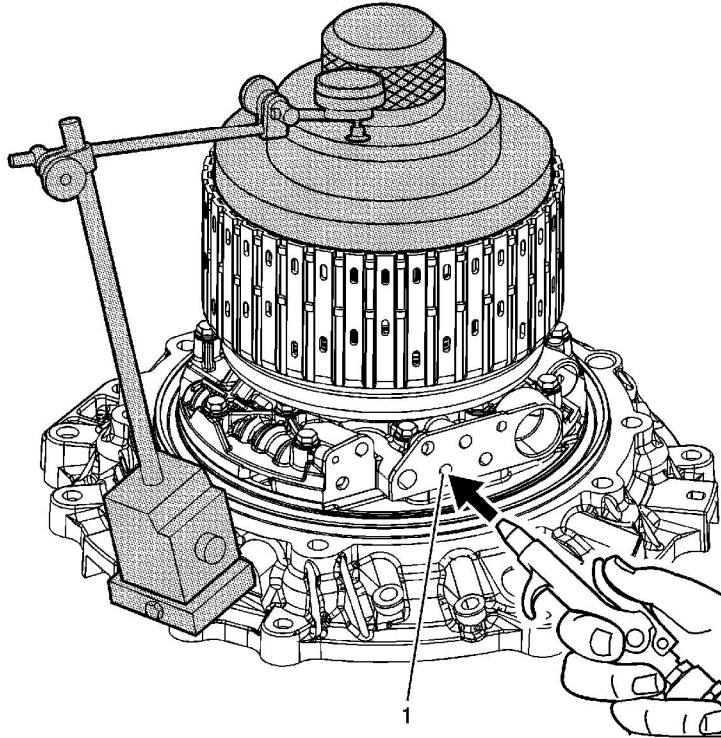

Callout	Component Name
Preliminary Procedures	
<ol style="list-style-type: none"> 1. Install the 1-2-3-4 and 3-5 reverse clutch housing with the 1-2-3-4 and 3-5 reverse clutch plates installed, onto the torque converter housing. 2. Install the DT 47868-2 onto the torque converter housing. 3. Install DT 47868-1 onto the 3-5 reverse clutch backing plate. 4. Install the J 26900-13 onto DT 47868-2. 5. Attach the J 8001 to the J 26900-13 and zero out the dial indicator on the DT 47868-1. 	
Special Tools	
<ul style="list-style-type: none"> • DT 47868-1 Clutch Pack Travel Weight • DT 47868-2 Magnetic Base Adapter • J 8001 Dial Indicator Set • J 26900-13 Magnetic Base 	
	3-5 Reverse Clutch Apply Passage

1

Tip

Apply compressed air to the apply passage hole, and observe the dial indicator measurement. Refer to [Clutch Backing Plate Retaining Ring Specifications](#) .